

Tool Box #3 How to order Replacement Stickers for Louisville Ladders




Reminder: Werner & Louisville are the parent companies of several other ladder brands. Look at the bottom of the safety instructions for manufacturer.

ALWAYS USE LADDER AS DESCRIBED ABOVE. NEVER MISUSE OR ABUSE A LADDER.

© 2013 Werner Co. P/N 55764-06 Rev R 9/13 DLS

1. Order replacement stickers by entering the model # in the search box at the top right corner of the Louisville Ladder Website: [Search | Louisville Ladder](#)

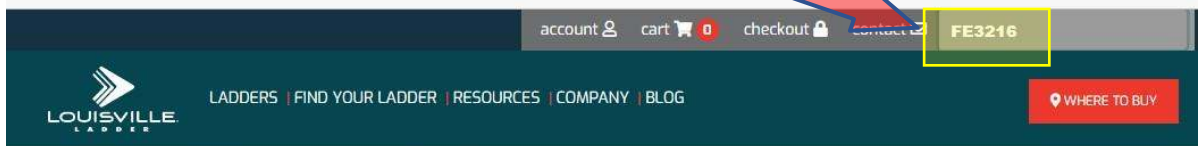

17 SEARCH RESULTS FOR: FE3216

Ladder or Parts Accessories Results

Louisville Ladder 16-Foot Fiberglass Extension Ladder, Type IA, 300-pound Load Capacity, FE3216
<https://louisvillematerial.com/ladders/extension-ladders/louisville-ladder-16-foot-fiberglass-extension-ladder-type-ia-300-pound-load-capacity->

2. Select your ladder in the list of ladders. Scroll to the bottom of the page and find the section labeled...



3. Beneath this section is a list of parts for that ladder, use the arrows underneath the parts until you find (Type of Ladder) ...REPLACM LAB



4. Select ADD TO CART. Then select the quantity (QTY) of stickers you need and PROCEED TO CHECKOUT to pay for stickers.

[CONTINUE SHOPPING](#)

Product	Product Name	Unit Price	Qty	Subtotal	Update/Remove
	Extension Replacm Label Kits SKU# PK708-EL	\$25.59	1	\$25.59	
				Grand Total: \$25.59	


[PROCEED TO CHECKOUT](#)

address with free ground shipping in the Continental US.

How to order Replacement Stickers for Werner Ladders



1. Order replacement stickers by entering the model # in the search box at the top center of the Werner Co. authorized part distributor (Nall & Company, Inc) website:
<https://www.wernerparts.com/parts.html>

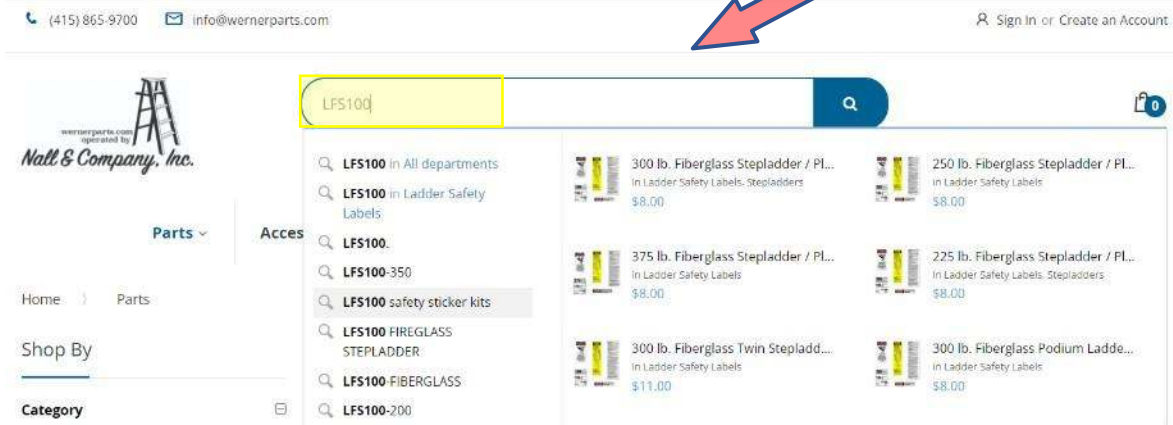

2. Look for your Ladder's model # "Safety Sticker kits" and select it.
For example safety sticker kits

250 lb. Fiberglass Stepladder / Platform ladder Safety Labels



Model number of your current ladder is NOT required when placing an order for safety labels

Please note: **1 kit** includes stickers for **1 ladder ONLY**.

SKU: LFS100-250

\$8.00



3. Find the weight rating of the ladder (the 3 digits after the dash) or you can enter it directly in the search box above. Select the "Add to Cart" button to purchase the replacement stickers.

4. A green bar will appear at the top of the page to let you know it has been added to your shopping cart.

✓ You added 250 lb. Fiberglass Stepladder / Platform ladder Safety Labels to your shopping cart.

5. When ready to checkout and pay for the stickers, select the check out button at the top right of the page to pay.



6. Fill out the shipping information, you can check out as a guest to pay for items.



NOTE:
Werner/Nall & Co. Inc., charges a flat \$10.00 shipping fee.



OSHA's definition of a step stool:

The [Federal OSHA standard at 29 CFR 1926.1050\(b\)](#) defines a step stool which is the equipment you refer to as a self-supporting, foldable, portable ladder, nonadjustable in length, 32 inches or less in overall size, with flat steps and without a pail shelf, designed to be climbed on the ladder top cap as well as all the steps.

Step stools are suitable only for use on floors with a flat surface and are not usable on those with irregular surfaces. They can be used as a ladder, but they have the advantage of being more comfortable to be able to stand on its wider platform. For small heights they are safer than a normal ladder.

Always inspect the step stool prior to each use, or at minimum before the first use on each shift. During the step stool inspection, you are checking that all parts of the step stool are in good working condition, including:

- all four anti-slip feet
- climbing/gripping surfaces on each step
- step-to-side rail connections
- working parts, bolts, rivets

Always set up and use the step stool according to the manufacturer's instructions. Before using any step stool for the first time, review all warning labels and instructions on the step stool and read the owner's manual for guidance on proper use and safety precautions.

Ensure that the step stool you are planning to use is sturdy and able to support the intended weight of the task. The maximum intended load includes the weight of the employee as well as the PPE worn, and all tools, equipment and materials being carried.

To be used safely, a step stool must be placed on level ground with solid floor support for all four feet. The step stool should be set up close to the work being performed or the area that needs to be accessed. If you begin to climb and feel like the step stool is not balanced properly, climb down and reposition.

Climb and use the step stool in a way that allows your body to be near the middle of the steps to prevent tipping or fall hazards. Avoid over-reaching when on a step stool. Always face the step stool when climbing up or down. Step stools are intended to be used by only one person at a time.